





# swissvoice

## Xtra Photo 8155



### Quick user guide (EN/FR/DE)

THIS ADDITIONAL HANDSET WORKS ONLY WITH SWISSVOICE XTRA 2155/3155  
CE COMBINÉ SUPPLÉMENTAIRE NE FONCTIONNE QU'AVEC SWISSVOICE2155/3155  
DIESES ZUBEHÖRTEIL IST NUR FÜR SWISSVOICE XTRA 2155/3155 GEEIGNET

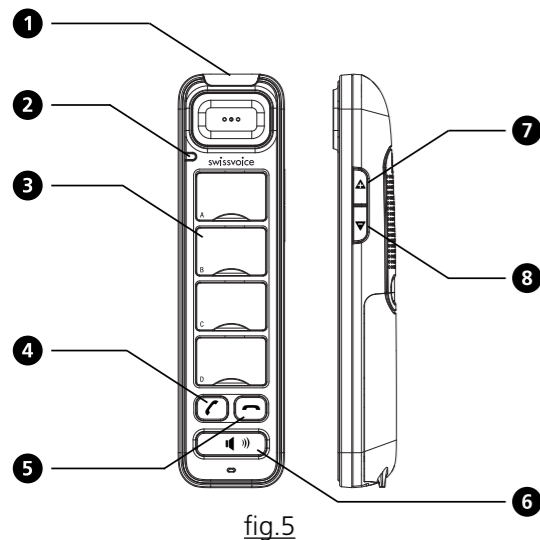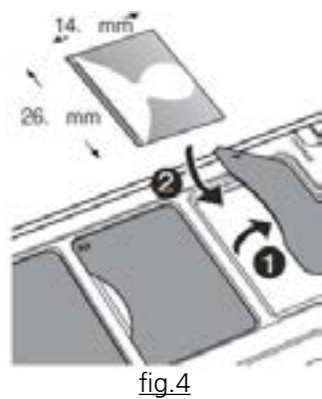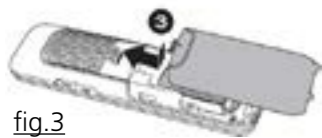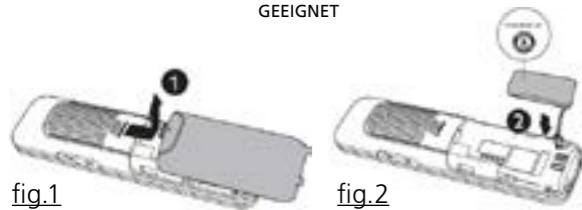

## ENGLISH

### CONNECTING YOUR PHONE

Connect plug in corresponding socket in the charger. Insert power plug in an electrical outlet. Insert battery pack in handset as follows:

1. Slide down battery door (fig.1).
2. Connect battery socket in correct position as below (fig.2).
3. Close the battery door.

Before you start to use your telephone, charge batteries continuously for 15 hours. Only use plug adaptor supplied with the unit and rechargeable battery pack with your phone.

### REGISTRATION with Swissvoice Xtra 2155 or Xtra 3155 (Max. 3 handsets can be registered to the same base unit)

1. Press and hold on the telephone base of Swissvoice Xtra 2155 (right handset side) or Xtra 3155 (left handset side) in idle mode for around 5 seconds. Red LED light bar on either base will be on.
2. Put Xtra Photo 8155 handset on the charger for registration. It takes max. 90 seconds to complete the registration process.
3. When registration completes, the Xtra Photo 8155 handset and the telephone base (of Xtra 2155 or 3155) will emit confirmation beep separately, and Red LED light on either base will be off.
4. If registration fails, the base unit will not emit confirmation beep after 1 minute. Pls. repeat the above procedure.

### PRODUCT OVERVIEW (FIG.5)

1. **Red Incoming Call LED**
2. **Charge LED**
  - On when the handset battery is charging.
  - Flashes red every 10 seconds when the handset battery is low and not charging.
3. **4 Photo speed dial keys (A, B, C, D)**
  - Press to dial a preset number (refer to Xtra 2155 or Xtra 3155 user guide)
  - If the incoming call is matched to 1 of 4 present numbers, its voice tag will be announced during ringing. (if it has been previously recorded on Xtra 2155 or 3155)

You can put suitable size of photo or write name on white card (4 spare white cards included) Due to different thickness of photo or card, it is better to add a 2-side sticker to fix your photo or your card to each photo's bracket on the handset in order to avoid it from falling out.

4.
  - To place a call :
    - press this key+ one of the photo memories (photo memories can be pressed directly to place a call)
    - To answer a call
      - During ringing, Green LED is flashing.
      - During talk mode, Green LED stays on.

**Note:** Automatic answering: if handset is on its charger when a call is arriving, the call can be answered directly by lifting up the handset.

5.
  - Hang up a call.
  - Mute the ringer temporarily while the phone is

- ringing.
- Mute the paging tone.

6.
  - Make or answer a call using the speakerphone.
  - Switch between the speakerphone and the earpiece.
  - During speaker mode, Green LED is on.

7.
  - Increase the ringer volume and the listening volume.
  - During standby mode, adjust ringer volume louder.

8.
  - Decrease the ringer volume and the listening volume.
  - During standby mode, adjust ringer volume less loud.

### TECHNICAL SPECIFICATIONS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time* 100 hours standby*
Battery type	2.4V, AAA Ni-MH battery pack
Operating Temperature	From 5°C to 40°C

\* Values may vary according to environment.

### TROUBLESHOOTING

As a general rule, if a problem occurs, remove the battery pack from the handset for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset battery pack.

My handset does not work at all.	Make sure the charger is installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the charger after use.
I cannot dial out.	Make sure the handset has registered to Swissvoice Xtra 2155 or Xtra 3155 telephone base.
I experience poor sound quality when using the handset speakerphone.	For increased sound quality in speaker mode, place the handset on a flat surface with the keys facing up.
The handset does not ring when there is an incoming call.	Press  to increase the ringer volume when the handset is not in use.

For more information, get online assistance on [www.swissvoice.net](http://www.swissvoice.net).

### SAFETY

This telephone is not designed for Emergency Calls when the main power fails.

Do not use your telephone to notify a gas leak or other potential explosion hazard.

Do not open your device or its power supply to avoid risk of electrical shock. Do not attempt to open the batteries, as they contain hazardous chemical substances.

Your telephone must be located in a dry place away from hot,

humid and direct sunlight condition. To avoid radio signal interference, place the phone at least 1 meter away from other electrical appliances or other phones.

### ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

**Help us protect the environment in which we live!**

### CONFORMITY

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.swissvoice.net](http://www.swissvoice.net)  
Maximum Output Power (NTP) : 24dBm  
Frequency Range : 1880-1900MHz

### WARRANTY

Refer to Swissvoice Xtra 2155 or Xtra3155's user guide.

## FRANCAIS

### INSTALLATION

Branchez la prise sur le connecteur correspondant du chargeur. Branchez le cordon d'alimentation dans une prise secteur.

Installez la batterie dans le combiné comme suit :

1. Glissez le couvercle du compartiment de la batterie vers le bas (fig.1).
2. Branchez le connecteur de la batterie dans la position correcte (fig.2).
3. Refermez le couvercle du compartiment de la batterie (fig.3).

Mettez la batterie à charger pendant 15 heures avant d'utiliser le combiné pour la première fois. Utilisez uniquement le chargeur et la batterie rechargeable qui sont fournis avec votre téléphone.

### ASSOCIATION DU COMBINÉ COMBINÉ AVEC SWISSVOICE XTRA 2155 OU 3155 (vous pouvez associer jusqu'à 3 combinés sur la même base)

1. En mode veille, appuyez sur la touche de la base du Xtra 2155 (côté droit du combiné) ou du Xtra 3155 (côté gauche du combiné) et maintenez-la enfoncée pendant environ 5 secondes. Le voyant lumineux rouge s'allume sur la base.
2. Posez le combiné du Xtra Photo 8155 sur le chargeur pour l'associer sur la base (de Xtra 2155 ou 3155). L'opération peut durer jusqu'à 90 secondes.
3. Une fois l'association terminée, le combiné Xtra Photo 8155 et la base (de Xtra 2155 ou Xtra3155) émettent chacun un bip de confirmation et le voyant lumineux de la base s'éteint.
4. En cas d'échec de l'association, la base n'émet aucun bip de confirmation après 1 minute. Répétez alors la procédure ci-dessus.

### PRÉSENTATION DU PRODUIT (FIG.5)

1. **Voyant lumineux rouge d'appel entrant**
2. **Voyant lumineux de charge**
  - Fixe lorsque la batterie est en charge.
  - Clignote en rouge toutes les 10 secondes

lorsque la batterie du combiné est insuffisamment chargée et n'est pas connectée au chargeur.

3. **4 touches photo de numérotation rapide (A, B, C, D)**
  - Appuyez sur une des 4 touches pour composer un numéro pré-enregistré (reportez-vous au guide d'utilisateur du Xtra 2155 ou du Xtra 3155).
  - Lorsque le numéro de l'appelant correspond à celui mémorisé dans l'une des 4 touches photo, la sonnerie retentit et la voix enregistrée est lue.

Insérez une photo de dimension appropriée ou écrivez un nom sur la carte blanche (4 cartes blanches sont fournies).

L'épaisseur des photos et des cartes variant de l'une à l'autre, utilisez un ruban adhésif double face pour fixer la photo ou la carte sur son support afin d'éviter qu'elle ne tombe.

4.
  - Appuyer sur cette touche:
    - pour répondre à un appel
    - pour appeler une mémoire photo (appuyer sur cette touche puis sur touche photo)
  - Le voyant lumineux vert clignote lorsque la sonnerie retentit.
  - Pendant une communication, le voyant lumineux vert reste allumé.

5.
  - Appuyer sur cette touche pour mettre fin à un appel
  - Coupe temporairement la sonnerie lorsque celle-ci retentit.
  - Désactive la sonnerie de recherche de combiné.

**Note:** En saisissant directement le combiné sur son chargeur lorsqu'un appel arrive, vous prenez directement la ligne sans appuyer sur la touche.

6.
  - Emettre ou répondre à un appel en mode mains-libres.
  - Bascule entre le mode mains-libres et le mode écoute au combiné.
  - En mode mains-libres, le voyant lumineux vert est allumé.

7.
  - Augmente le volume de la sonnerie et le volume d'écoute dans le combiné.
  - En mode veille, augmente le volume de la sonnerie.

8.
  - Diminue le volume de la sonnerie et le volume d'écoute.
  - En mode veille, diminue le volume de la sonnerie.

### SPÉCIFICATIONS TECHNIQUES

Portée en terrain libre	Jusqu'à 300 mètres*
Portée intérieure	Jusqu'à 50 mètres*
Autonomie de la pile du combiné (valeurs moyennes)	10 heures en mode conversation* 100 heures en mode veille*





